


WRECKER CAM LOCKS

ANATOMY AND MAINTENANCE

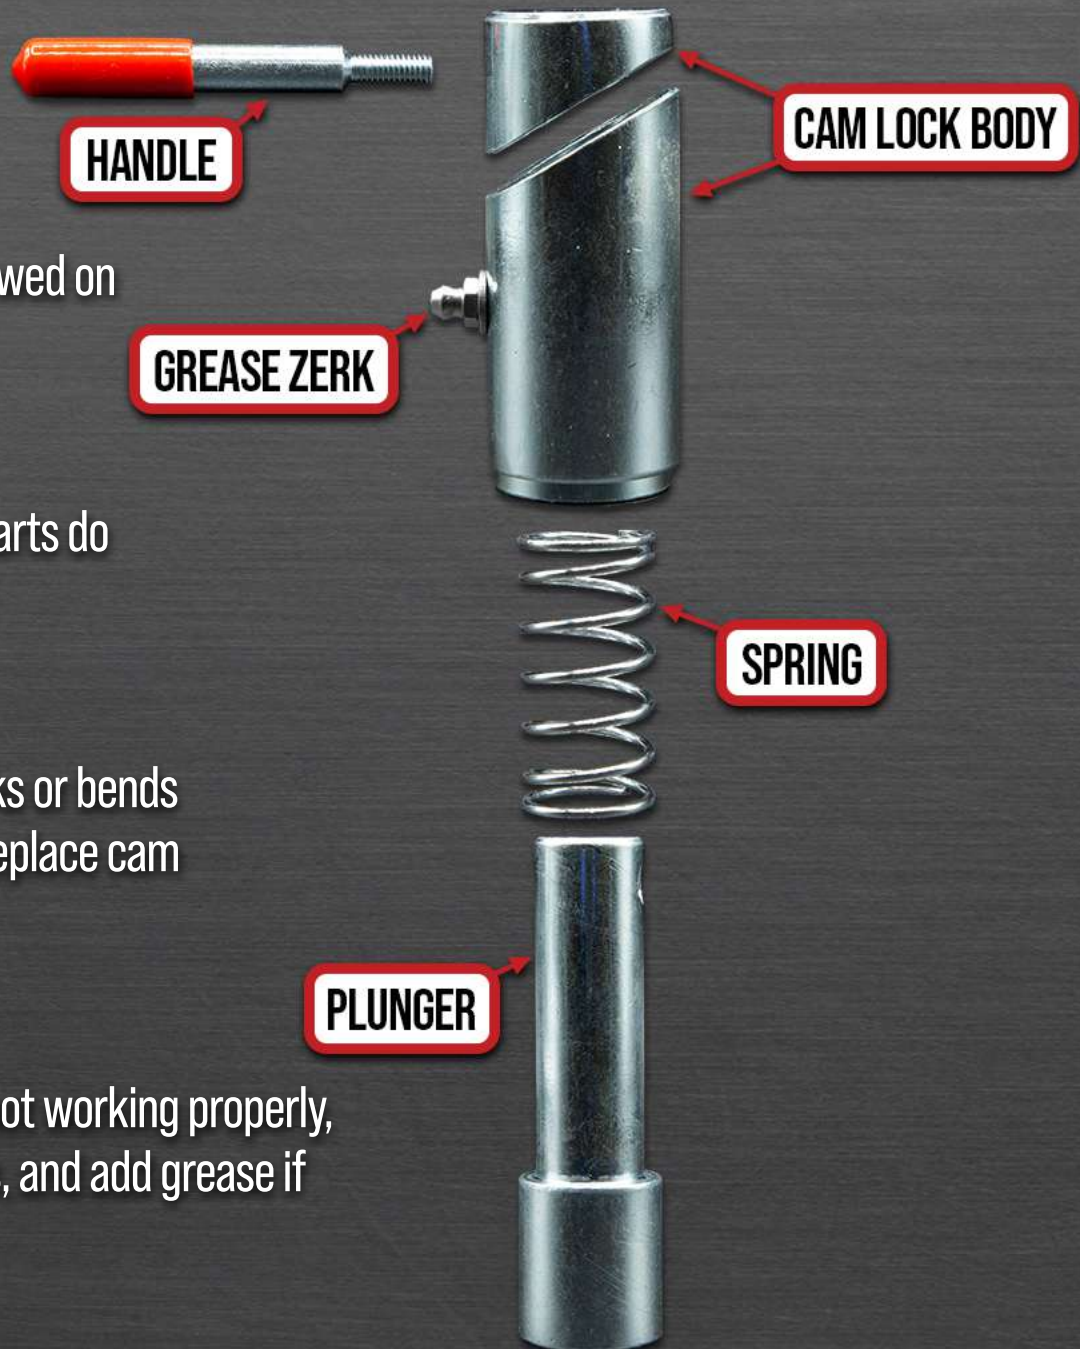

Handle:

Make sure the handle is screwed on tight before use.

Grease Zerk:

Add 1-2 Pumps of grease if parts do not move smoothly.

Cam Lock Body:

Make sure there are no cracks or bends in the body. Do not use and replace cam lock immediately.

Spring and Plunger:

If Spring and or Plunger are not working properly, inspect them for irregularities, and add grease if needed.